
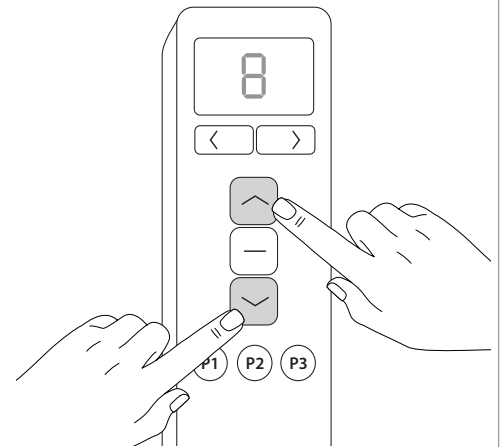
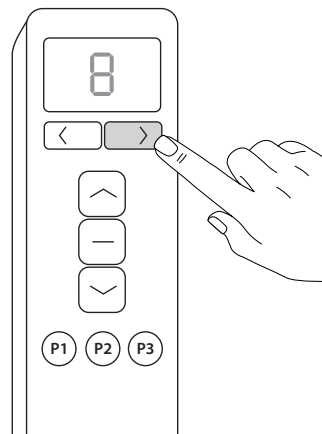


Status LED Light Signals

Green Light	Blink Once	Command received/ Wake from deep sleep
	Solid	RF Pairing mode
Red Light	Blink Twice	Enter deep sleep mode
	Solid	Error / Flat battery
	Constant Blinking	Low battery

How to Pair Luna Roll to Remote

SCAN FOR VIDEO TUTORIAL

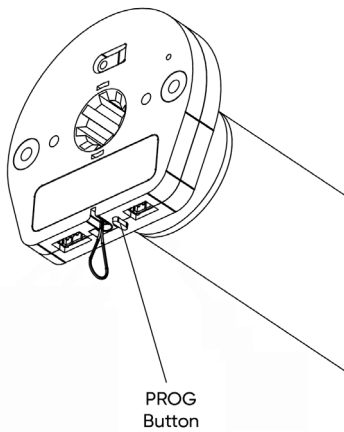

1. Put into pairing mode

Press and hold the **PROG** button until the **Status LED** light remain green.

2. Choose Desired Channel

On your remote, use & to select desired channel number.

3. Set Channel

Hold down and button simultaneously. After 3-5 seconds, the **Status LED** on motor will remain green, pairing is now complete.

Battery Charging

- The charging port on the motor accepts standard USB Type C charging cables.
- Any USB charger can be used provided that it is certified and rated for at least 1A.
- When charging, the **Status LED** will be solid amber.
- Once charging is complete, the **Status LED** will turn off.

Factory Reset

Factory reset process will clear all limits of the motor including paired RF channels.

1. Ensure the **Status LED** is off.
2. Press and hold the **PROG** button until the **Status LED** turns solid green.
3. Pull down on the **Pull Switch** until the **Status LED** blinks amber twice.

Deep Sleep Mode

The motor has a deep sleep mode to prevent limit setting issues if multiple motors are paired to the same RF channel.

Wake up from deep sleep mode

Hold down the **PROG** button until the **Status LED** blinks green twice to wake up from deep sleep mode.

Enter deep sleep mode


Hold down the **PROG** button until the **Status LED** blinks amber twice to enter deep sleep mode.

How to Set Travel Limit with Remote


SCAN FOR VIDEO TUTORIAL




Before Set up: Make sure the motor is paired to the remote and the desired channel is selected.

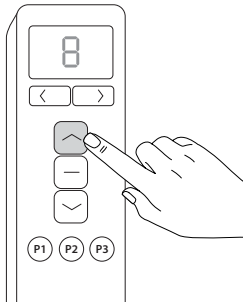


1. Move blind to top*

Press and hold  until the Luna Roll moves to the top.

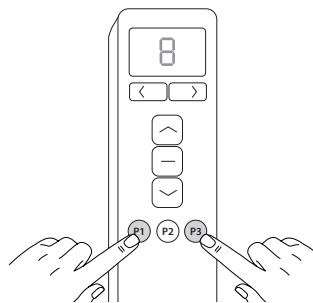


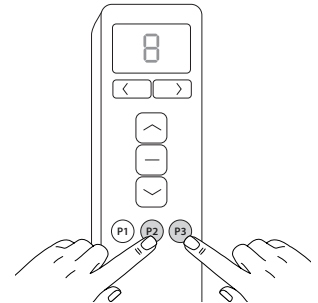
2. Turn on **CONFIG** Mode

Press and hold the **P1 + P3** button until the Luna Roll jogs to enter **CONFIG** mode.

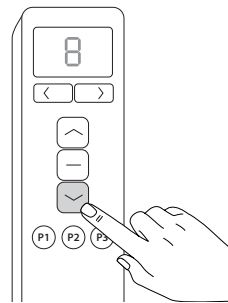


3. Move blind to bottom

Press and hold  until the Luna Roll moves to the bottom.




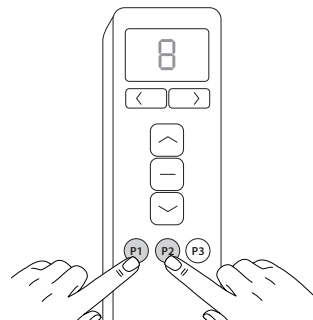
4. Set Bottom Limit

Press and hold the **P3 + P2** button until the Luna Roll jogs to set bottom limit.

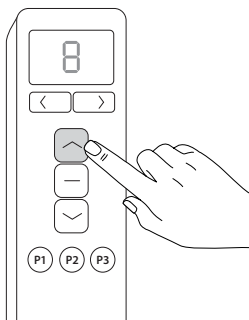


5. Move blind to top

Press and hold  until the Luna Roll moves to the top.




6. Set Top Limit

Press and hold the **P1 + P2** button until the Luna Roll jogs to set top limit.

 
 
 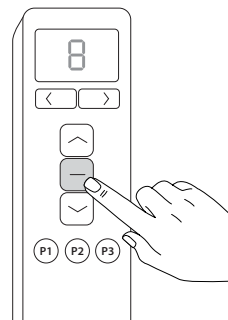


7. Exit **CONFIG** Mode

Press and hold  until the Luna Roll jogs to exist the **CONFIG** mode.

* Motor runs opposite direction


If the motor runs in reverse, you may want to change the setting before continuing:

1. Hold **P1 + P3** together until the motor jogs for 6 seconds.
2. Hold  +  , together until the motor jogs again.
3. Hold  until the motor jogs to exit **CONFIG** mode.


Note: The bottom limit must be set first



Due to the way the firmware is designed, the bottom limit must first be set before you can set the top limit. Limit setting must be completed in one go - that is: Enter **CONFIG** mode, set bottom limit, set top limit, exit **CONFIG** mode. If you exit **CONFIG** mode before both limits have been set, you will have to start over.

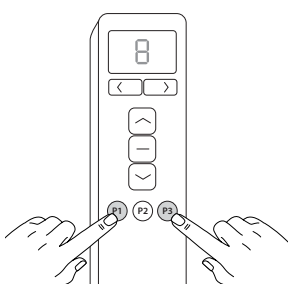Delete Current Channel

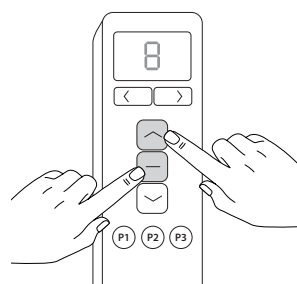


1. Hold **P1 + P3** until motor jogs.






2. Hold  +  until motor jogs.

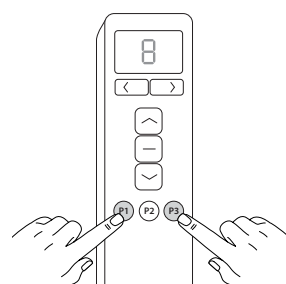Delete All Channel

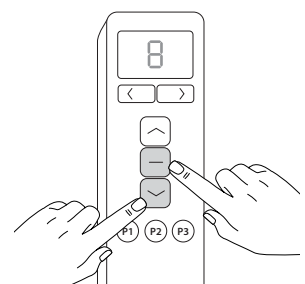

1. Hold **P1 + P3** until motor jogs.



2. Hold  +  until motor jogs.