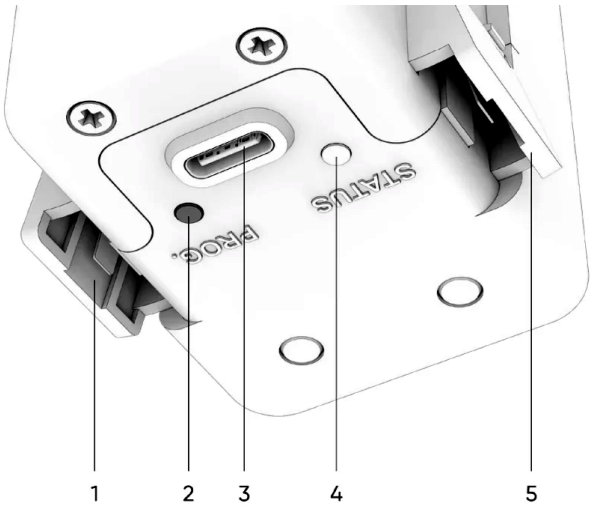


Status LED Light Signals

Green Light	Blink Twice	Command received
	Blink 3 Times	Wake from deep sleep mode
	Solid	RF Pairing mode
	Constant Blinking	Limit setting mode
Red Light	Blink Twice	An Error occurs
	Blink 3 times	Enter deep sleep mode
	Solid	Motor is currently charging
	Constant Blinking	Low battery

I/O Summary

1. Side Switch L
2. PROG button
3. USB-C charging port
4. Status LED
5. Side Switch R

Quick Fixes & Motor Care

Battery Charging

- Use a standard USB Type C charging cable.
- Any USB charger can be used provided that it is certified and rated for at least 1A.
- When charging, the ***Status LED*** will be solid amber.
- The ***Status LED*** will turn off once filly charged.

Deep Sleep Mode

The motor has a deep sleep mode to prevent limit setting issues if multiple motors are paired to the same RF channel.

Wake up from deep sleep mode

Hold down the ***PROG*** button until the ***Status LED*** blinks green twice to wake up from deep sleep mode.

Enter deep sleep mode

Hold down the ***PROG*** button until the ***Status LED*** blinks amber twice to enter deep sleep mode.

Luna Glide Track Care

The Luna Glide motor is sensitive to dust or small obstructions in the track, which may cause it to stop during operation. If this happens:

1. Wipe the full track with a damp or wet wipe.
2. Wipe again with a dry cloth until completely dry.
3. Operate the Luna Glide again.

Regular track cleaning will help ensure smooth operation.


How to Set Travel Limit - One Way

SCAN FOR VIDEO TUTORIAL

BEFORE YOU START


Make sure the curtain is fully closed, turn on the Luna Glide and position it to the end of the curtain track.

1 Enter Limit Setting mode

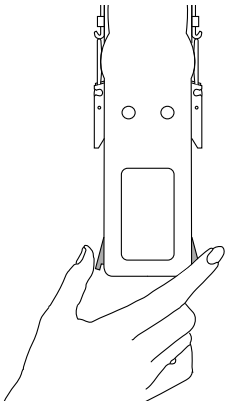


Hold ***Side Switch L*** and ***R*** until the motor jogs to enter limit setting mode.

2 Send motor to open

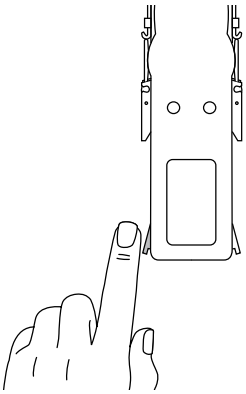


*Tap ***Side Switch L*** or ***R*** to send the motor towards the fully open position.

3 Send motor to close

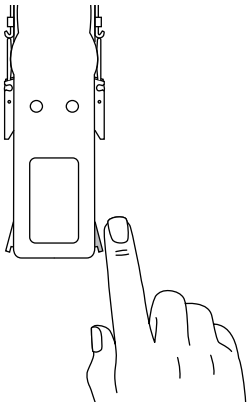

*Tap the opposing ***Side Switch*** to send the motor backs to the fully close position.

4 Pair to Remote Channel

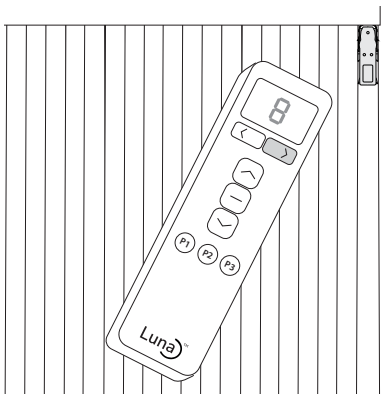

Follow the instruction on ***Page 3*** to pair motor to the desired remote channel.

*Side Switch Directions

Pressing either ***Side Switch L*** or ***Side Switch R*** will send the motor in the same direction as the direction of the push. The motor will continue running until it reaches the end limit or the opposing side switch is pressed.

Pair Luna Glide to Remote

SCAN FOR VIDEO TUTORIAL

BEFORE YOU START | Make sure you set the travel limit first. See instruction on Page 2.


1 Put motor in pairing mode



PROG button


Hold the PROG button until the Status LED is solid green.

2 Choose Desired Channel

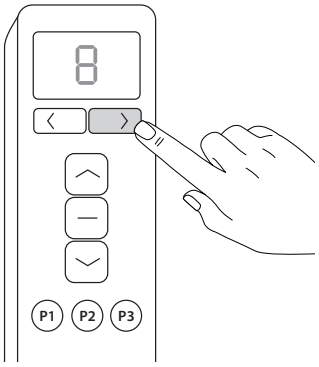

On your remote, use 〈 & 〉 to select desire channel number.

3 Set Channel

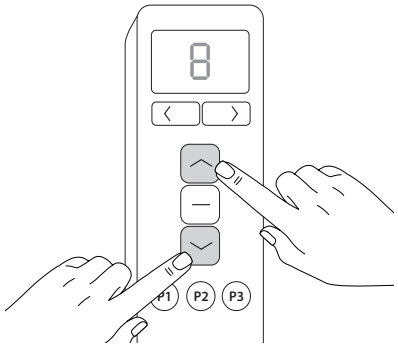


Hold ^ + v button together until the Status LED on motor flashs green twice.

Grouping Multiple Motors


To control multiple motors using the same remote channel, simply select the channel you want to use, then repeat the pairing steps above for each motor. Once paired, all motors assigned to that channel will operate together.

Delete Channels

Delete Current Channel

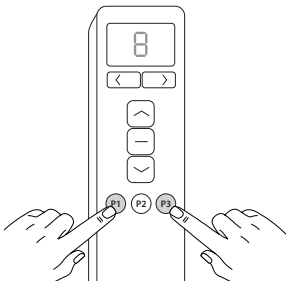


1. Hold ***P1*** + ***P3*** until motor jogs.

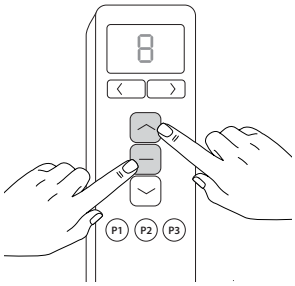


2. Hold ^ + — untill motor jogs.

Delete All Channel

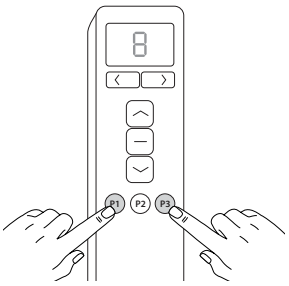

1. Hold ***P1*** + ***P3*** until motor jogs.

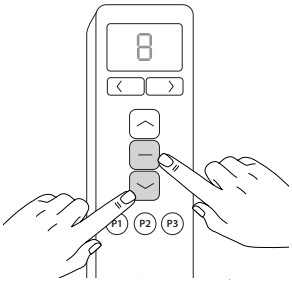

2. Hold v + — untill motor jogs.

*** Motor moving the wrong way?**

If the motor runs in reverse, you may want to change the setting before continuing:


1. Hold ***P1*** + ***P3*** together until the motor jogs for 6 seconds.
2. Hold ^ + v , together until the motor jogs again.
3. Hold — until the motor jogs to exit ***CONFIG*** mode.

How to Set Travel Limit - Center Opening


SCAN FOR VIDEO TUTORIAL

START POSITION

You require two Luna Glides for center opening set up. Ensure the curtain is fully closed to the center, and position the glides to the middle of the curtain track.

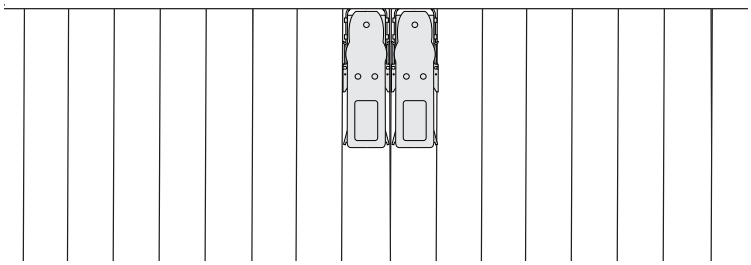


1 Start with RIGHT motor

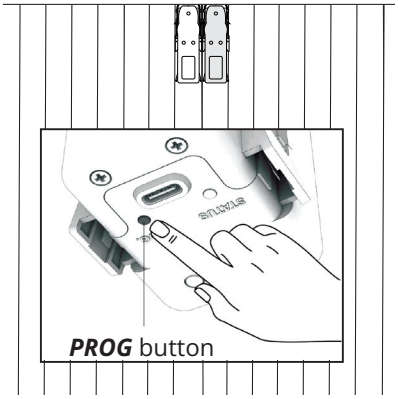


Turn on Right motor[1]. If both motors are on, turn off the Left Motor[2].

2 Set limits for RIGHT motor

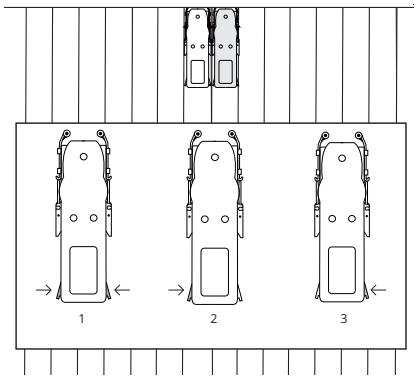


Follow the *Step 1 - 3* on page 2 to set travel limit for right motor.

3 Pair the RIGHT motor

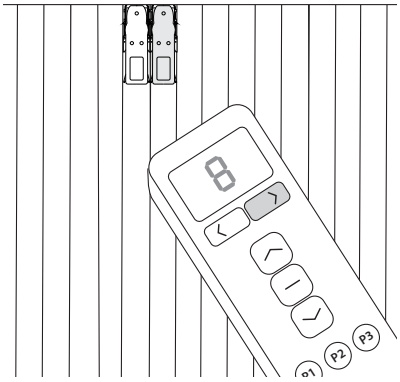


Pair the Right motor to the desired remote channel (*Follow Page 3*).

1 Continue with LEFT motor

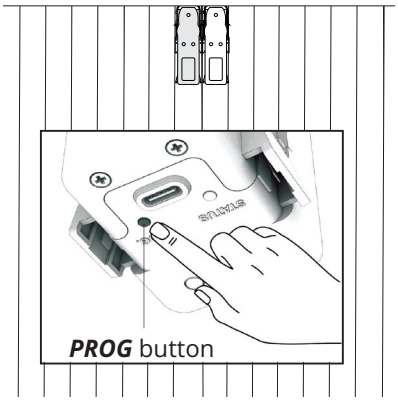


Turn the RIGHT motor off. Turn the LEFT motor on.

2 Set and pair the LEFT motor

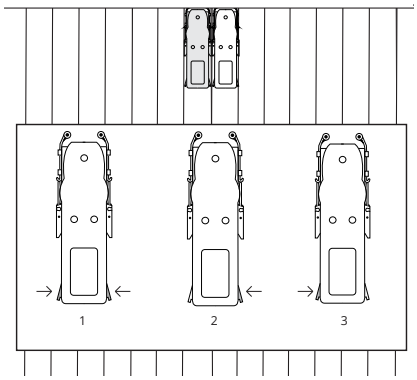

Repeat Step 2 & 3 to set the limit and pair the left motor to remote. Pair it to the same remote channel as the Right Motor.

3 Finish and test

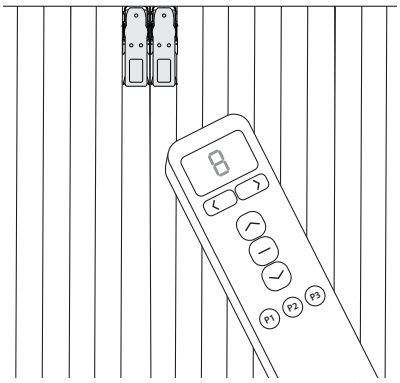

Turn the RIGHT motor back on. Press ⌃, — or ⌄ to test the channel. The Luna Roll should respond normally.

[1] To turn on the motor, hold down the ***PROG*** button until the ***Status LED*** blinks green 3 times.

[2] To turn off the motor, hold down the ***PROG*** button until the ***Status LED*** blinks red 3 times.